
NOTE:

All battening and panel installation is performed by registered Supercrete™ Panel Installers. These details are shown for general information purposes only

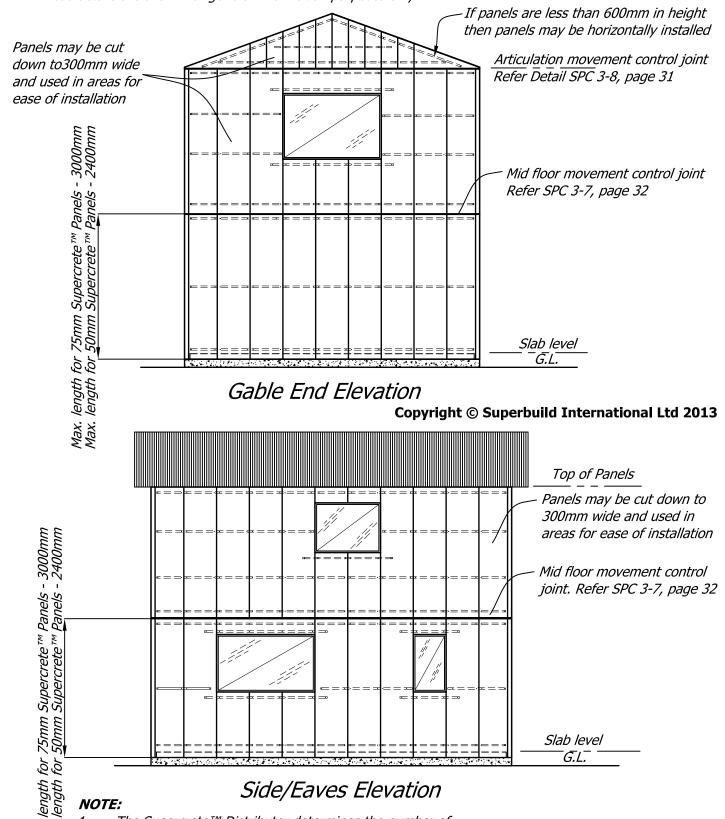

Side/Eaves Elevation

NOTE:

- The Supercrete™ Distributor determines the number of battens and batten spacing using wind and earthquake load information provided by the building owner
- Vertical control joints not shown on these details. Refer to Section 2.2.2.1, page 13 for control joint locations. Building owner to specify control joint locations on the project construction drawings.



Title: SupercreteTM Panel Two Storey Construction Details with Single Horizontal Control Joint

Date: February 2014

Scale: N.T.S.

Detail No. SPC 1-4b

Slab level G.L.

This drawing must be read in conjunction with the Supercrete Panel Cladding System Design & Installation Guide